

# Updating Proxima server with a PXU file


Version: 1.1

Date: 12/06/2024

Before you begin, check that you have: the Proxima server, an HDMI screen, a computer connected to the Internet and networked to the Proxima server.


## 1. Preparing to install PXU firmware

- Download the PXU firmware file from the Waves System website.
- Connect to the Proxima server from a web browser.
- In the **My file** menu, at the root, add a folder named **UPDATE** (in uppercase) using the **New folder** function.
- Copy the **.pxu** file into the **UPDATE** folder.

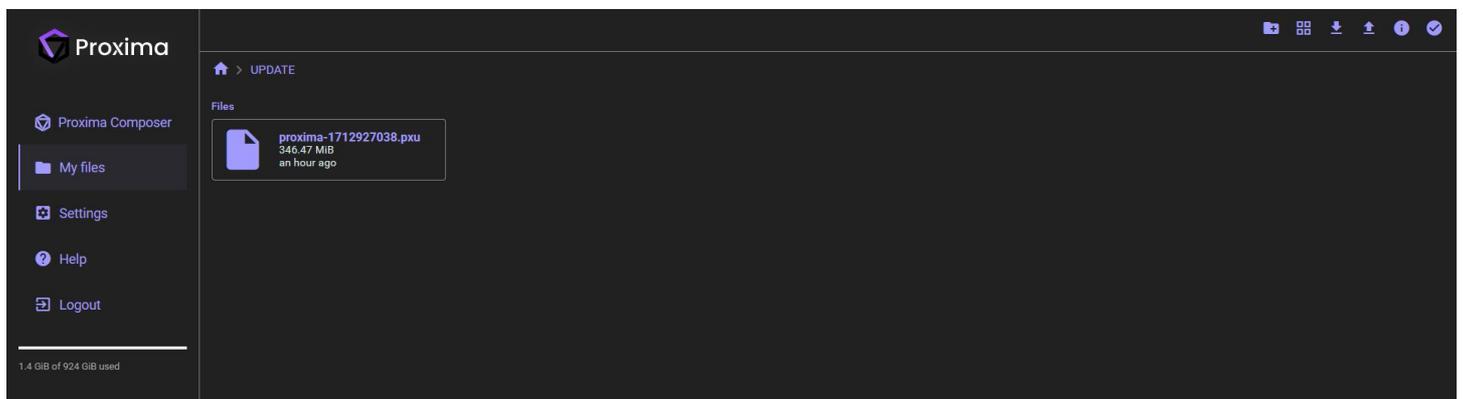


## 2. Installing PXU firmware

- In the **Settings** -> **System** menu.
- Click the **UPDATE** button once (**only once is important**).

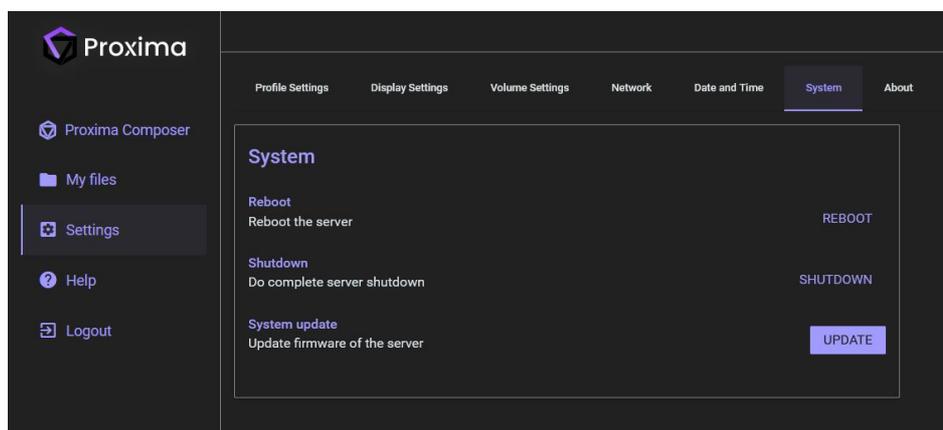

- Attendez quelques secondes avant que la fenêtre de progression de la mise à jour **Proxima server is updating** apparaisse :
- Wait a few seconds before the **Proxima server is updating** window appears:

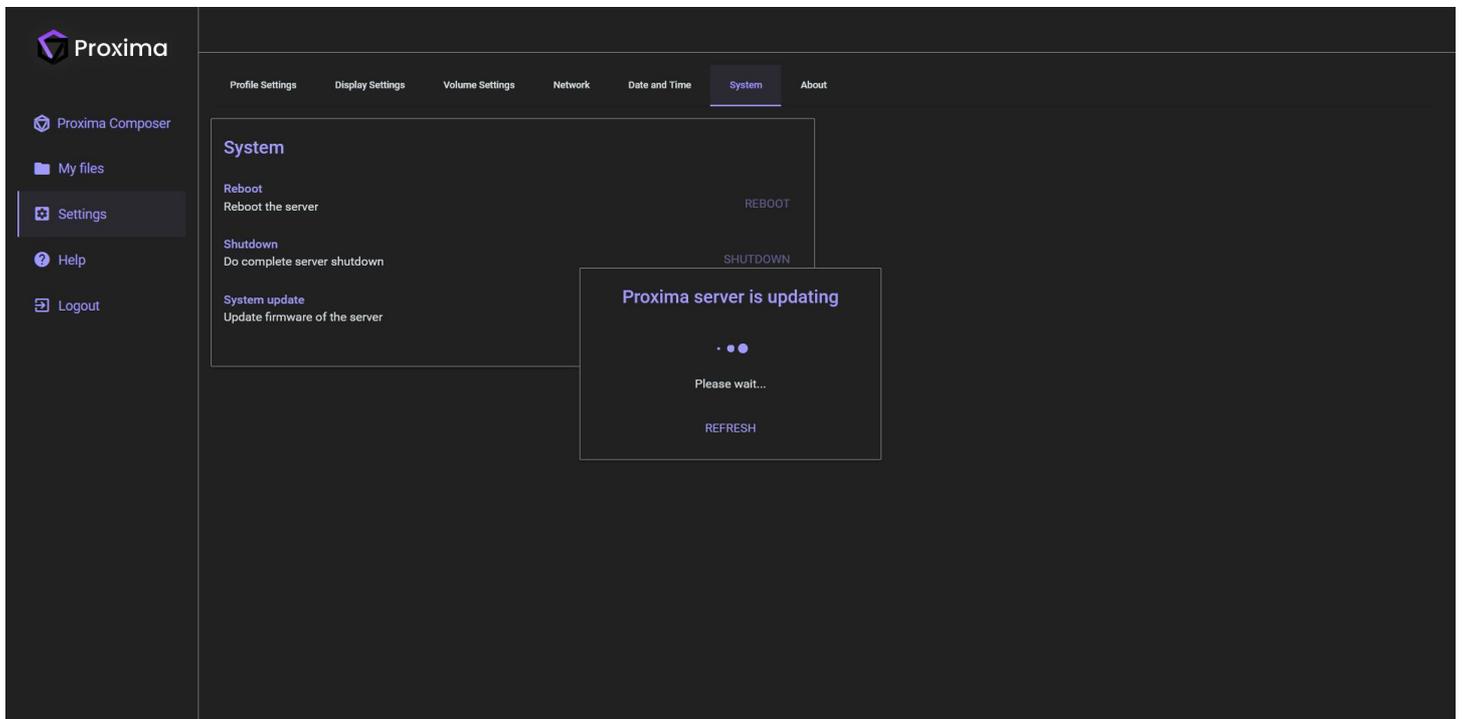

The server will update the firmware, then completely reboot the system. Wait until the **Proxima server is updating** window is completely gone.

**Warning! Do not turn off the server during the server update operation.**